
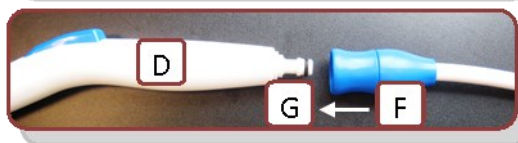


One-time Installation of Rinse Ace® Connector:

1. (A) Remove your showerhead. Adjustable wrench or pliers may be needed to remove showerhead. To prevent scratching, always cover parts with a cloth before using a wrench or pliers.
2. (B) Wrap pipe threads with the enclosed Teflon® tape. This produces a better seal and prevents possible leaking. Twist Rinse Ace® Connector onto your shower pipe. Exposed threads will not affect the seal. The Rinse Ace® Connector should twist on easily by hand. If you have difficulty, remove the Connector, change the angle to align the threads and try again. **DO NOT FORCE THE RINSE ACE® CONNECTOR** this could strip the Connector threads. Hand-tighten only to prevent damaging the Connector.
3. Wrap the Rinse Ace® Connector threads with the enclosed Teflon® tape. Reattach the showerhead - **DO NOT FORCE**. Exposed threads on the Rinse Ace® Connector will not affect the seal. Hand-tightening is sufficient.

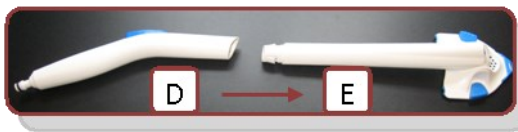

Wand Assembly and Use:

1. Snap together Wand sections D and E. Push until you cannot pull Wand apart. *(Assembly is permanent).*
2. Attach hose (F) by aligning tabs on hose end with notches in Shower Connector (C) opening. Push and twist clockwise to lock. *Water will not come through the showerhead when the hose is attached.*
3. Attach hose to Wand—blue hose quick-connector (F) pushes over back wand section (D) black o-ring (G).

Scrubbing:



4. Attach WHITE side of scrubbing pad (H) to BLUE pad-backer (I) on Wand swivel head (J).
5. Turn on COLD water. At this point, no water will run from showerhead or Wand. *Water only flows when the blue Wand trigger (L) is pressed.*
6. To activate soap in the scrubbing pad, the pad must get wet. It is suggested to spray tub and shower surfaces first, then begin scrubbing with the Wand. To wet tub and shower surfaces, first ensure the swivel head (J) is not blocking the spray channel (K). With your hand, flip swivel head down so it is parallel to Wand handle.

Press blue Wand trigger (L) and point Wand swivel head toward surfaces to wet. At any point, you can rewet the scrubbing pad by moving the Wand so the spray channel (K) is placed over the holes (M) in the swivel head. Press the Wand trigger (L) briefly. Proceed with scrubbing.



Rinsing:

7. To rinse away suds, push swivel head (J) down with your hand so it is parallel to Wand handle. Press blue Wand trigger (L) and point Wand swivel head toward the surface to rinse.

Storing:

8. When rinsing is complete, turn off water. Detach hose from Rinse Ace® Shower Connector by turning counter clockwise. *Before detaching Wand from hose, drain water from hose by pressing blue Wand trigger (L), over tub or shower floor.*
9. Detach hose from Wand by pushing down on blue hose quick-connector (F) with one hand and pulling Wand back section with other hand.
10. Remove scrubbing pad (H) from pad backer (J). Dispose pad out of reach of children and pets to avoid accidental ingestion. Do not flush the scrubbing pad. Store hose and Wand with other cleaning products.

See easy installation and use video at: <http://bit.ly/iAyp2E>

Questions or comments? Call (800)867-4673 or (262)703-0011.
Or visit <http://www.rinseace.com/product/scrub-and-rinse-wand>

RinseACE®

A better shower in a snap.®



Safeguards:

- ◆ Always stand on a non-slip surface when in the shower or tub.
- ◆ Keep out of reach if children and pets. Not for personal use.
- ◆ Do not use with other household cleaners, as hazardous gases may result.

Helpful Hints:

- ◆ For best results, set water temperature to COLD.
- ◆ In large tub/shower enclosure, Wand can be detached from hose to scrub hard-to-reach areas. Turn water OFF before detaching Wand from hose.
- ◆ If the hose is difficult to connect to the Wand or Connector, the black o-ring may be dry. Lubricate it with petroleum jelly or submerge in water.
- ◆ Drain water from hose after cleaning, and before storing. Over tub or shower floor, press Wand trigger to release water in hose.
- ◆ Rinse pad backer under running water to remove excess pad material that may collect on pad backer's attachment hooks.
- ◆ Wipe down Wand after use to keep it sparkling clean. NEVER clean in dishwasher.

Frequently Asked Questions:

- ◆ How does this cleaner compare to others?
 - ◆ The concentrated eco-cleaner in the disposable pad is better for you and the environment. The pH neutral formulation makes it safe to touch and the low foam formulation cleans better than the leading brands' wands. *
Plus, low foam means you will use less water to rinse away the cleaner which helps conserve water.
(* Independent Laboratory Testing)
- ◆ Can I use the scrubbing pad on other surfaces?
 - ◆ The disposable scrubbing pad is loaded with a pH neutral cleaner that is safe on your skin and all surfaces. If the pad is still sudsy after cleaning the tub and shower, remove the pad from the Wand to clean sinks, faucets and countertops. The Wand is also handy for cleaning plastic and synthetic shower curtains, plastic and aluminum mini blinds, window screens and waste baskets.

One Year Warranty

Idea Factory, Inc. warrants this product shall be free of defects in assembly under normal use when properly installed and maintained in accordance with instructions. This warranty does not include damage to the product resulting from misuse, product alteration or improper care and maintenance. This warranty gives you specific legal rights, and you may also have rights that vary from state to state.

If the product should become defective, Idea Factory, Inc. will repair it or elect to replace it free of charge. To obtain warranty service, email consumerassist@ideafactoryinc.com or call (800)867-4673. You may be instructed to return defective product, postage prepaid, to:

Consumer Assistance • Idea Factory, Inc. • N56 W16865 Ridgewood Dr., Suite 200 • Menomonee Falls, WI 53051-5656

Include a return shipping address inside the package. Idea Factory, Inc., will return your product postage prepaid. Allow 2 weeks for delivery. Not responsible for illegible, lost or misdirected mail. Claims of non-receipt will require you to provide a photocopy of substantiation of your shipment to Idea Factory, Inc.

Register your purchase at <http://www.rinseace.com/registration>

Also, review your purchase at http://www.rinseace.com/productreview?pr_page_id=1838

Your feedback will help others make an informed decision and help us improve our products



Join our Facebook community. We'll keep you up to date on promotions and new products!

Like your purchase? Share our page and products with your friends!

www.facebook.com/RinseAce

Questions or comments? Call (800)867-4673 or (262)703-0011.

Or visit <http://www.rinseace.com/product/scrub-and-rinse-wand>



ideafactory inc