

RinseACE®

Pet bathing made easy.®

Indoor Outdoor Pet Sprayer

For Outdoor Spigot and Garden Hose or 3/4" Laundry Tub Faucet:
Twist hose base (F) on the threads.

For Bathroom and Kitchen Faucets:

- Remove the faucet's current aerator from spout (A).
- If spout is threaded on the **outside**, place **thinner** washer only (B) inside enclosed aerator. If spout is threaded on the **inside**, place **thicker** washer only (C) inside enclosed aerator.
- Twist aerator (D) onto spout (A). Aerator can stay permanently attached, if desired.
- Twist "Quick Connector" (E) into hose base (F).
- Turn on water slowly. Press sprayer to start water flow. Check temperature before spraying person or pet.

Small drips may occur from backside of aerator with some faucets when hose is not attached. This is normal.

Connect Hose:

- Align tabs on "Quick Connector" (E) with markings on aerator (D). With one hand, hold faucet for leverage and with other hand push quick-connector (E) into aerator (D). Turn hose clockwise a quarter turn until it stops then pull down slightly.
- Turn on water slowly. Press sprayer to start water flow. Check temperature before spraying person or pet!

WHEN WATER IS TURNED ON, NEVER LEAVE HOSE UNATTENDED.

Disconnect Hose:

- Turn off water before detaching hose. To detach hose, place one hand on faucet for leverage and use other hand to:
 - a. Push the hose up.
 - b. Turn the hose counterclockwise a quarter turn.
 - c. Pull down to detach hose from aerator.
 - d. Hold hose end over sink, then elevate sprayer and press sprayer to drain remaining water in hose.

Occasionally the aerator (D) becomes separated during shipping. If this happens to you, please call (800) 867-4673 and we will help you reassemble the aerator. This will not affect the performance of the product.

See easy installation and use video at: <http://bit.ly/iG5xCr>

Helpful Hints

- Always check water temperature first by pressing lever and spray away from person or pet.
- Lubricate black o-ring on "Quick-Connector" (E) if hose is difficult to plug into aerator.
- Drain water from hose by pressing sprayer lever.

Register your product at: www.rinseace.com/service/product-registration/

One Year Warranty

Idea Factory, Inc., warrants this product shall be free of defects in assembly under normal use when properly installed and maintained in accordance with instructions. This warranty does not include damage to the product resulting from misuse, product alteration or improper care and maintenance. This warranty gives you specific legal rights, and you may also have rights that vary from state to state.

If the product should become defective, Idea Factory, Inc., will repair it or elect to replace it free of charge. To obtain warranty service, e-mail consumerassist@ideafactoryinc.com or call (800) 867-4673. You may be instructed to return defective product, postage prepaid, to:

Consumer Assistance • Idea Factory, Inc. • N56 W16865 Ridgewood Dr., Suite 200 • Menomonee Falls, WI 53051-5656

Include a return shipping address inside the package. Idea Factory, Inc., will return your product postage prepaid. Allow 2 weeks for delivery. Not responsible for illegible, lost or misdirected mail.

Claims of non-receipt will require you to provide a photocopy of substantiation of your shipment to Idea Factory, Inc.

