

One-time Installation: For Bathroom and Kitchen Faucets:

- Remove the faucet's current aerator from spout (A).
- If spout is threaded on the **outside**, place **thinner** washer only (B) inside enclosed aerator. If spout is threaded on the **inside**, place **thicker** washer only (C) inside enclosed aerator.
- Twist Rinse Ace® aerator (D) onto spout (A). Aerator can stay permanently attached, if desired.
- Twist Rinse Ace® "Quick Connector" (E) into hose base (F).

Connect Hose:


- Pull down white ring on Quick-Connect and push onto Rinse Ace aerator
- Turn on water slowly. Press sprayer to start water flow. Check temperature before spraying your baby!
WHEN WATER IS TURNED ON, NEVER LEAVE HOSE UNATTENDED.

Disconnect Hose:

- Turn off water. Disconnect hose by holding down white ring on "Quick Connector" and pull down to detach hose from aerator.
- Hold hose end over sink, then elevate sprayer and press sprayer button to drain remaining water in hose.

To Use Sprayer:

- Turn on water. *Water will come out of the sprayer only when the blue toggle lever is in the UP position.* Adjust water flow by moving the easy-glide lever. Move toggle lever to PAUSE when shampooing to save water, if desired. When water is turned on, never leave hose unattended. Always face sprayer away from your baby before checking water temperature on your hand and before spraying baby.
- After drying your baby or toddler, turn on water to rinse the sink or tub clean. Turn off water. Twist the hose counterclockwise to unlock and pull straight out. Move blue lever UP on sprayer to drain remaining water from hose. Coil for easy storage with your other baby supplies.

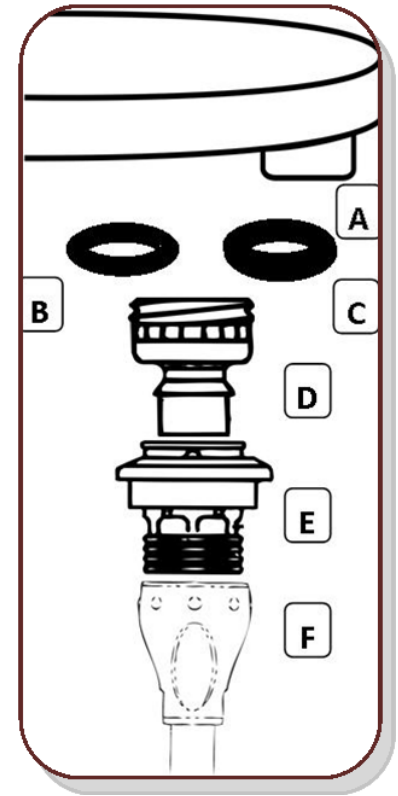

Register your purchase at: www.rinseace.com/service/product-registration/
Rinse Ace® Sink Baby Rinser makes bath time easier and more fun for you and baby.

One Year Warranty

Idea Factory, Inc., warrants this product shall be free of defects in assembly under normal use when properly installed and maintained in accordance with instructions. This warranty does not include damage to the product resulting from misuse, product alteration or improper care and maintenance.

This warranty gives you specific legal rights, and you may also have rights that vary from state to state.

If the product should become defective, Idea Factory, Inc., will repair it or elect to replace it free of charge. To obtain warranty service, e-mail consumerassist@ideafactoryinc.com or call (800) 867-4673. You may be instructed to return defective product, postage prepaid, to:

Consumer Assistance • Idea Factory, Inc. • N56 W16865 Ridgewood Dr., Suite 200 • Menomonee Falls, WI 53051-5656

Include a return shipping address inside the package. Idea Factory, Inc., will return your product postage prepaid. Allow 2 weeks for delivery. Not responsible for illegible, lost or misdirected mail. Claims of non-receipt will require you to provide a photocopy of substantiation of your shipment to Idea Factory, Inc.

Questions or comments? Call (800)867-4673 or (262)703-0011. or visit
www.rinseace.com/product/sink-baby-rinser/